

MANHASSET®

The standard of excellence around the world since 1935.

Instructions for assembly: Trombonist Stand

 
 
CAUTION: DO NOT apply any lubricant to the height adjustment shaft of these music stands, as that may cause the friction-grip clutch to lose some of its hold power.

TOOLS REQUIRED:


Screwdriver




11/16 or 17MM
Wrench
Or
Ratchet with
11/16 or 17MM
Socket



 
- ① Remove bolt and base cup washer from base of center column.




- ② Place tripod base over lower end of center column, replace retaining base assembly and tighten very securely.

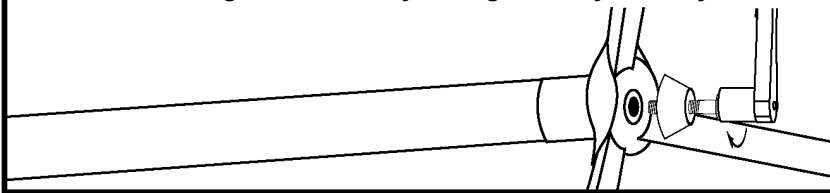


- ③ Extend the chrome inner shaft. Use screwdriver to loosen small bolt/nut and then insert chrome shaft **FULLY** into neck assembly on backside of desk with a rotating motion.

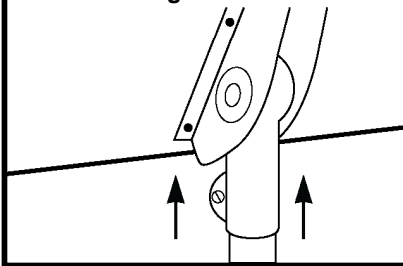


- ④ Tighten clamp onto the chrome shaft using a screwdriver.

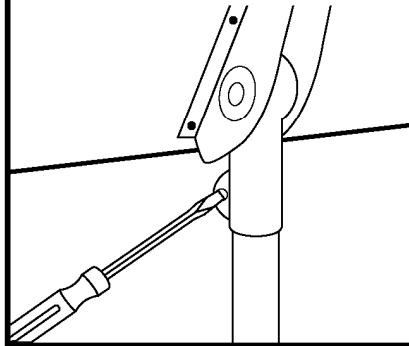

- ⑤ The desk of the stand can sit to the left or right of the center of the stand. Determine which position is desired and if necessary, remove the bolts/nuts of the Attachment Plate assembly and reattach on the preferred side.

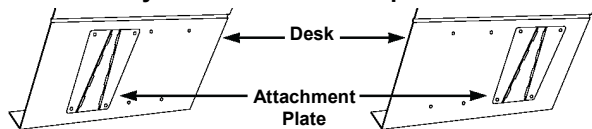

Music Stand Parts (Exploded View)

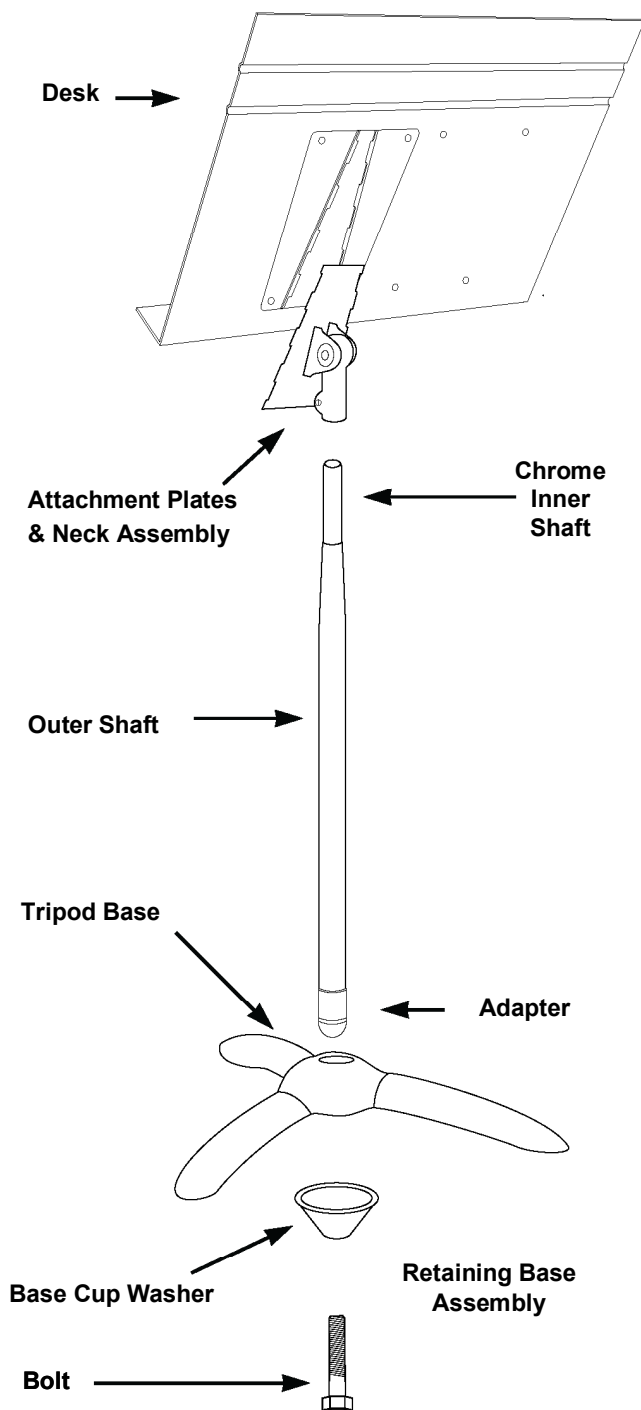

MANHASSET SPECIALTY CO.

P.O. Box 2518

Yakima, Washington 98907

(509) 248-3810 Fax (509) 248-3834